

ETP 520 Series Call Station Programming Guide

Programming the ETP-520 Series Call Station is relatively quick and easy. While it is recommended that you read the complete manual before you begin, the following quick guide will serve many applications.

NOTE:

After each ETP-520 Series programming code, a single beep indicates the code has been accepted. A double-beep indicates an error—re-enter the code again.

Quick Programming Guide

1. Call into the ETP-520 Series Call Station—it will answer with an open channel (microphone and speaker are active).
2. Enter the default security code: *4**
3. Program the Primary Phone Number to dial for Button 1: [0-20 digits for phone number] # 00
For dialing a number on a POTS or PSTN telephone line (i.e. calling an outside phone number), use the 10-digit phone number (i.e. 1+ area code + 7-digit number) of the answering point as the phone number.
4. Program the Second Phone Number for Button 1 (optional, for when the primary phone number is busy or does not answer) to dial: [0-20 digits for phone number] # 01
5. Recording a Location Message:
 - i. Record the location message for the ETP-520 Series Call Station button 1: * 41
 - ii. Wait for the tone to begin speaking/recording. The recorded message has a maximum length of 16 seconds.
 - iii. Press the # to stop recording, or it will end after 16 seconds. The recorded message will automatically play back.
 - iv. To review the recorded message for Button 1 again, press: * 51
 - v. To delete the recorded message for Button 1, press: * 31
 - vi. (Optional) activate Auxiliary Output 2, the orange and black pair with Button 1 for an outbound call to trigger Blue Beacon to flash, press 121111#76
 - vii. To exit programming and disconnect, press: # 7

Accessing Programming Mode

The ETP-520 Series Call Station can be programmed from a standard touch-tone telephone through an analog PBX extension or an analog PSTN line.

It is essential to program at least one telephone number for the Talkaphone unit to operate.

After entering the access code, the order in which codes are entered is irrelevant.

NOTE:

After each programming code, a single beep indicates the code has been accepted. A double-beep indicates an error—re-enter the code again.

1. Using the Security Code
 - i. Call into the ETP-520 Series Call Station.
 - ii. Enter the default security code: *4**
 - iii. The call station will output a single beep and enter programming mode—any programming code(s) may now be entered.
 - iv. When programming is completed, enter this code to disconnect: # 7